

High Precision Calibration Source For voltage, current and thermocouples DIGISTANT®

Code: 4462 EN

Delivery: upon request

Warranty: 24 months

Model 4462



- High precision current and voltage source ± 52 mA, ± 30 V
 Option: ± 22 mA, ± 60 V
- Precision simulation for all conventional thermocouple types (optional)
- Error limit 0.003 % Rdg.
- Standard with RS232 and IEEE488 interface, USB and Ethernet (optional)
- Current "SINK"

Application

The precision calibration unit combines high accuracy, low drift, low noise and superior long-term stability with multiple functionality and simple operation.

Ramps, $\Delta + /\Delta$ -, and multiple setpoint storage make the operation of the device easier for the user.

For that reason the application possibilities are many:

- ► Calibration of current and DC-voltage meters
- Precise testing of thermocouple temperature measuring instruments
- Calibration of controllers, sensors, detection devices and other devices used in process control
- ► Open-loop process control with the aid of integrated ramp function

<code>DIGISTANT®</code> model 4462 can be used both as a stand-alone table-top device, as well as in automatic, computer-assisted manufacturing and testing systems.

Description

It is possible to set current of \pm 200 nA ... \pm 52 mA, voltage of \pm 1 μ V ... \pm 30 V and, optionally temperature setpoint value of 14 thermocouples types.

The output value is fed back via the sense line to eliminate voltage drops across the measuring leads.

The device has an adjustable current/voltage limitation. An external voltage divider of 1 up to 1:1000 can be considered internally.


With the thermovoltage sourcing option you can enter °C, °F and K, the temperature scales ITS 90 or IPTS 68 and the comparison point mode constant/external. Furthermore, when sourcing thermocouples a calibrated external comparison point can be used, whereby the data for calibration in the device can be taken into consideration.

Indication of the source value is carried out in large 12 mm figures on an illuminated graphics-LCD.

The device can be operated both via the keyboard as well as the interface.

burster

Source main menu

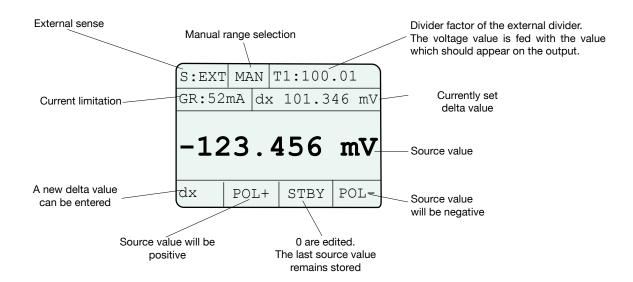

Operating Examples

Ramp 1 Configuration menu

SEQUENZ: TF	RIANGEL
REPETITIONS:	: 17
START-VAL:	0.0mV
END-VAL: 25	50.0mV
DELTA-VAL: 2	25.0mV
DELTA-TIME.	nh:mm:ss.s
	RETU

Ramp function:

Ramp 1 with constant delta values and delta time
 Ramp 2 with variable delta values and internal time.

The ramp function allows single or repeated outputs in sawtooth or triangular form. The number of steps can set from 0 to 99 (0 is continuos). The START, END and DELTA values can be entered in μ V, mV, V, mA and temperature values. DELTA time is displayed as shown in the menu.

Current/voltage, limit setting

LIMITATION				
U-LIMIT: 20 V				
I-LIMIT: 10 mA				
1 V >< 32 V				
HOME RETU				

Current/voltage limit:

If a voltage or temperature value is given, the current limit is automatically active. If current is sourced the voltage limit is active. The voltage limit ranges from 1 V to 32 V and the current limit ranges from 1 mA to 55 mA.

TC/Temperature menu

TC-TYPE:	K IF	TS68
RJ-TYPE:	EXTERN	Ī
RJ-TEMP: 3	00.00	K
TEMP.DIMEN	SION:	K
SCALE: IPTS	68	
	HOME	RETU

Pt100 scale (measurement with external RJ)

A = 0.0039083					
Ro =	100				
B = -	B = -5.775E - 07				
C = -4.183E - 12					
DIN EN: 0.0039083					
0.003 < > 0.006					
Exp	EN	HOME	RETU		

Optionally the thermocouples types R, S, B, J, T, E, K, U, L, N, M, C, D and G2 can be simulated. For the "manual" reference junction at 0 °C the accuracy depends on the thermocouple model starting at 0.1 K.

The connection occurs directly at the standard terminals or "externally" via an external, attachable reference junction model 4485-V001, at which the temperature is detected with a Pt100 sensor (see application 1).

- 10 °C ... 60 °C

Technical Data

Voltage source

Rar	_	Reso- lution		Error limits at 23 °C ± of reading	TC with resp. to 23 °C
30	V	0.1 mV		$0.003~\%$ (bis ± 4.5 V) + 200 μ V (> ± 4.5 V) + 1.1 mV	8 ppm/K + 10 μV/K
3	V	10	μV	0.003 % (bis \pm 450 mV) + 20 μ V (> \pm 450 mV) + 110 μ V	8 ppm/K + 1 μV/K
300	mV	1	μV	0.003 % (bis \pm 45 mV) + 3 μ V (> \pm 45 mV) + 11 μ	8 ppm/K + 0.35 μV/K

Option: 60 V (Range 30 V will be dropped)

Range	Reso-	Error limits at 23 °C ± of reading	TC with resp.
±	lution		to 23 °C
60 V	0.2 mV	0.003 % (bis ± 9 V) + 500 μV (> ± 9 V) + 2.2 mV	8 ppm/K + 10 μV/K

max. 52 mA at 30 V, source resistance < 10 m Ω Output current: (max, 22 mA at 60 V, model-VXX1)

Current source

Range	Reso-	Error limits	TC with resp.
±	lution	at 23 °C ± of reading	to 23 °C
52 mA	200 nA	0.007 % (bis ± 7.5 mA) + 0.6 μA	10 ppm/K
(22 mA)		(> ± 7.5 mA) + 3 μA	+ 10 nA/K

Burden voltage: max 30 V at 52 mA, source resistance > 500 M Ω Confidence coefficient for the specified errors: 95 % (K2). (Burden voltage: max 60 V at 22 mA, model VXX1)

Option: Thermocouple simulation

opacin memocapic cinalation						
Model		Range	e		Error (K)	*
R	- 50.0	°C	1768 °C	0.4	(+ 250	1768 °C)
S	- 50.0	°C	1768 °C	0.4	(+ 350	1768 °C)
В	0.0	°C	1820 °C	0.5	(+ 800	1820 °C)
J	- 210	°C	1200 °C	0.2	(- 210	900 °C)
Т	- 270	°C	400 °C	0.2	(- 170	400 °C)
Е	- 270	°C	1000 °C	0.2	(- 220	1000 °C)
K	- 270	°C	1372 °C	0.1	(- 50	800 °C)
U	- 200	°C	600 °C	0.3	(- 100	600 °C)
L	- 200	°C	900 °C	0.2	(- 100	750 °C)
N	- 270	°C	1300 °C	0.2	(-120	1200 °C)
М	- 50	°C	1410 °C	0.1	(- 50	900 °C)
С	0.0	°C	2315 °C	0.2	(+ 100	900 °C)
D	0.0	°C	2315 °C	0.2	(300	1100 °C)
G2	0.0	°C	2315 °C	0.3	(300	2100 °C)

*The errors are defined at "manual" reference junction 0 °C

Reference junction

EXTERNAL: The temperature is measured with an external Pt100 sensor. MANUAL: The reference junction temperature is entered manually.

Temperature recording in an external reference junction or temperature measurement with Pt100

Range	Resolution	Current (mA)	Tolerance
- 200 850 °C	0.01 °C	approx. 0.6	0.00006*x°C +0.045 °C

General Technical Data

Sockets:

I-Drift $< 70 \text{ ppm} / \text{year} + 0.5 \mu\text{A} / \text{year}$

30 minutes, until specified error limit Warm-up time: External divider: 1 to 1010

An external voltage divider can be connected. In this case the divider function is activated and the division factor of the external divider is entered. Then the source value is entered as the value that should be present at the divider's output.

Display: graphics LCD display with LED illumination Visual field: 56.3 mm x 38 mm, resolution 128 x 64 dots

> + output, - output, + sensor, - sensor, - gold-plated 4 mm terminals and 6 pin LEMO socket 1B for the optional

Pt100 connection.

 $\leq 50~\text{V}$ between analog ground and ground Potential to ground: Temperature range: 5 °C ... 23 °C ... 40 °C

80 % up to 31 °C above linear: decreasing Relative humidity: that temperature to 50 % at $T_{\rm max}$, no condensation

Storage temperature: metal housing in protection class I Device construction:

in accordance with DIN EN 61010 part 1

Power supply: 230 V \pm 10 %, 45 Hz ... 65 Hz, can be changed on device to 115 V

Power requirement: approx. 30 VA 237 x 285 x 151 [mm] Dimensions: (L x W x H) (with handles u = 325 mm)

Weight: ca. 6 kg Output: potential-free

Outputs and terminals on the rear side

Standard RS232C interface: 9 pin subminiatur D-socket

Baud rate 300 - 38 400 Protocoll ANSI X 3.28 1976 Subcategory 2.1, A3

Optional IEEE488 interface: 24 pin, open collector outputs

(E1) SH1, AH1, T6, TE0, L4, LE0, SR1, RL1, PP0, DC1, DT1, C0

SCPI, version 1997.0 Instruction language:

Order Information

DIGISTANT® Model 4462 - V Standard with RS232 and IEEE488 200 10 Option thermocouple simulation RJ temperature recording (temperature measurement with Pt100) subsequent installation is possible Option 60 V/22 mA

Accessories (Option)

4 measuring leads with low thermal voltage Cu/Te safety connectors, length 1 m Model 9900-K342

A test certificate with traceability verification is part of the delivery.

RS232 data cable

for PC connection Model 9900-K333 interface set consisting of USB/RS232 converter Model 9900-K361 Converter RS232 to Ethernet Model 9900-K453

External reference junction

for DIGISTANT® model 4462

for an accurate simulation of thermocouples.

Connection: Miniature thermo plug connection Model 4485-V001

(For description refer to page 4)

Assembly set suitable for 19" rack mounting Model 2329-Z004

DAkkS Calibration Certificates

DAkkS Calibration (basic system)

Each range (voltage, current) is calibrated at ±12,5 %, 25 %, 50 % and 90 % of full scale. Model 44DKD-4462-V100

DAkkS Calibration (extended system)

Each range (voltage, current) is calibrated at $\pm 12,5$ %, 25 %, 50 % and 90 % of full scale. With 2 points for 10 thermocouples, temperature of the reference junction 0 °C and two points for Pt100.

Model 44DKD-4462-V110

Calibration Certificate for the external reference junction

At 3 points (0 °C, + 23 °C and 40 °C). If the built-in Pt100 of the reference junction is calibrated (NAMAS, DAkkS or others) and you enter the probe calibration into the DIGISTANT® model 4462-VX1X the accuracy of the temperature measurement is ≤ 0.1 K (in the temperature range + 15 °C to + 35 °C). Model 44DKD-4485

v burster

Note:

External reference junction model 4485-V001 for thermocouples

- ► For an accurate simulation of thermocouples
- ► A built-in Pt100 for cold junction compensation
- ► Thermally stable and isolated construction
- ▶ Plug type: Miniature TC connector

Technical Data

Limits:Long term stability:

Insulation resistance between pins

in disconnected status:

Operating temperature range:

► Storage temperature range:

 \pm 0.3 K

typical 0.05 K/year

 $\geq 20~M\Omega$

0 °C ... <u>23 °C</u> ... 40 °C

- 10 °C ... 60 °C

Thermo cable and connector cause an additional error.

We recommend to use the class 1.



Application Example

1. Calibration of a PC card with a thermocouple measurement input

Instead of the thermocouple the calibration source DIGISTANT® model 4462 is connected. Using an external DAkkS calibrated reference junction the PC card is retraceable calibrated with the optimum accuracy. Up to 14 thermocouples can be selected.



2. Calibration of measuring system in medicine engineering

In the sweep function you set different current and voltage values with individual steps. The output happens once or repeatedly in triangular or sawtooth wave.







Synthesis processes in the production of medicine require a careful check.

A highly secured production process is life saving.